


Instruction Sheet

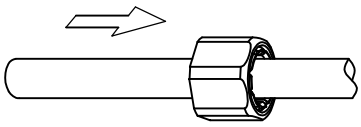


Step 1 :
Put cable through the Nut.
(OD:6~8mm;22~26AWG)

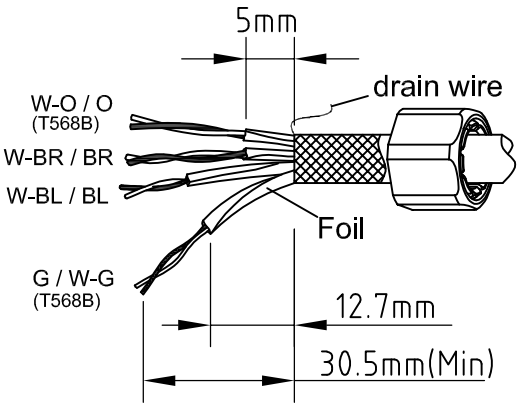


Step 2 :
①Strip off cable jacket for at least 30.5mm and retain 12.7 & 5mm foil from cable end.
②Back cover the braid then wrap the drain wire on it.

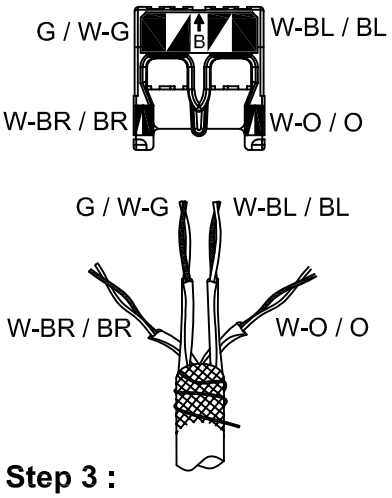


Step 3 :
Put wires through wire management in accordance with wiring color code.

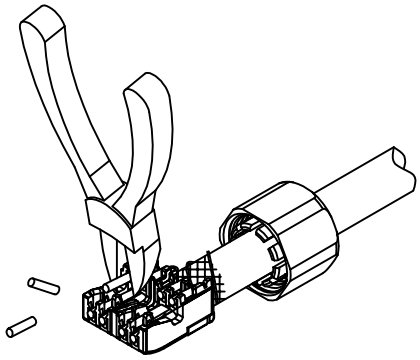


Step 4 :
Trim excess wires.

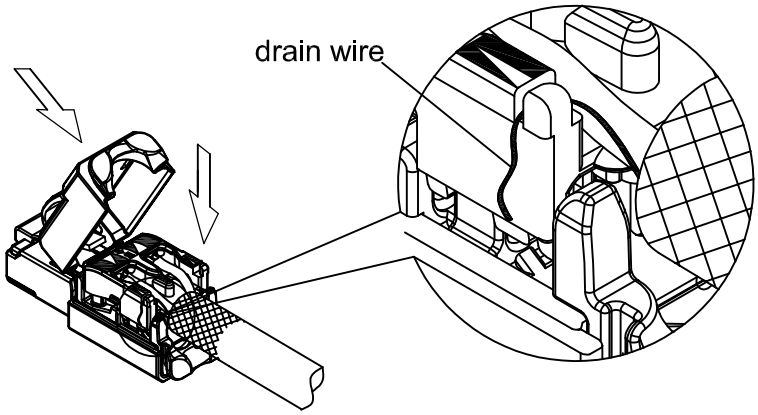


Step 5 :
Assemble the wire management.Then press the cover to engage with base housing.
* (A tool will be required for termination if the cable is too thick)
* (When the cable grounding consists of only a drain wire, put the wire into only a drain wire,put the wire into projecting slot of the wire management as shown.)

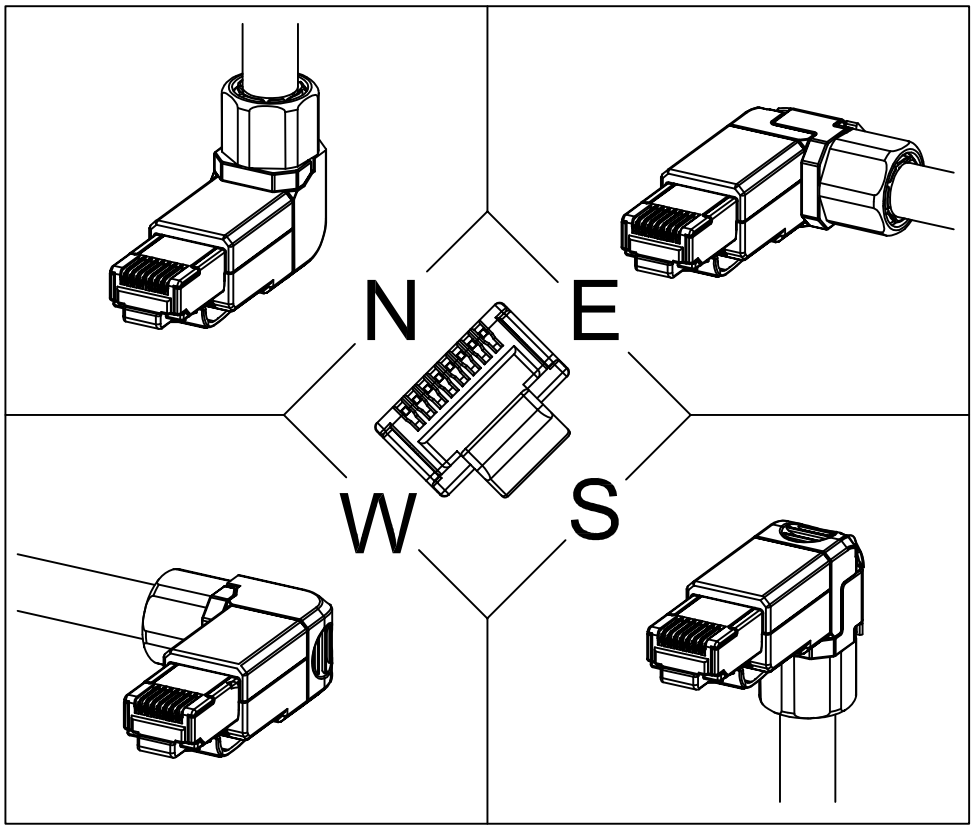

As shown, there are four optional direction can be chosen.

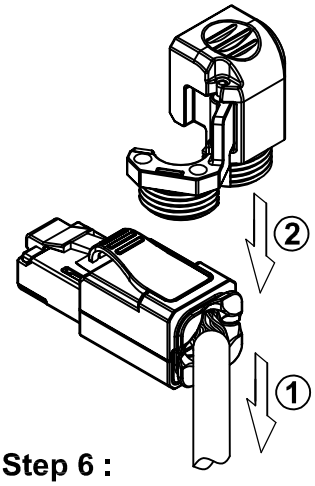

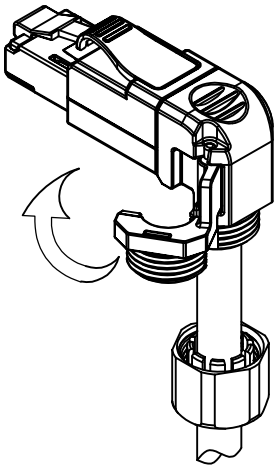


Step 6 :

Bend the cable as orientation desired.

*(When other orientation is desired, for performance consideration, suggest re-terminate cable and plug.)

Slide the strain relief onto the end of the plug and snap closed the threads.

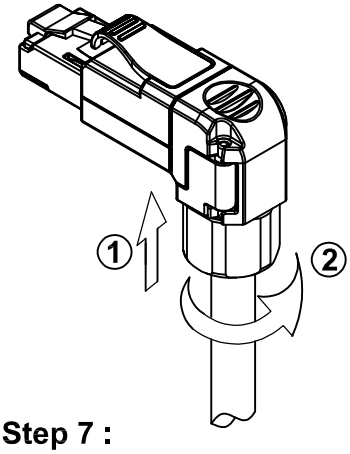

Step 7 :

Then slide the nut forward and hand tighten.

Disassembly Instruction:

